

**A. Product Data:** Submit manufacturer's product data, including warranty, maintenance and installation instructions, ASTM F 1292 test results, IPEMA certificate of compliance, and samples. To obtain a certificate, visit [www.zeager.com](http://www.zeager.com).

**B. Manufacturer Qualifications:**


1. Member of International Play Equipment Manufacturer's Association (IPEMA).
2. Total Liability Insurance Coverage: \$11,000,000.
3. Sales Representatives certified by National Playground Safety Institute (NPSI).

**C. Warranty Covers Playground Surfacing for Following Periods:**

1. Playground Surfacing Wear Mat: 5 years

**D. Manufacturer:**

1. Zeager Bros., Inc., 4000 East Harrisburg Pike, Middletown, Pennsylvania 17057. Toll Free (800) 346-8524.
2. Zeager Hardwood Co., 340 Steele Road, Franklin, KY 42134. Toll Free (800) 296-9227.

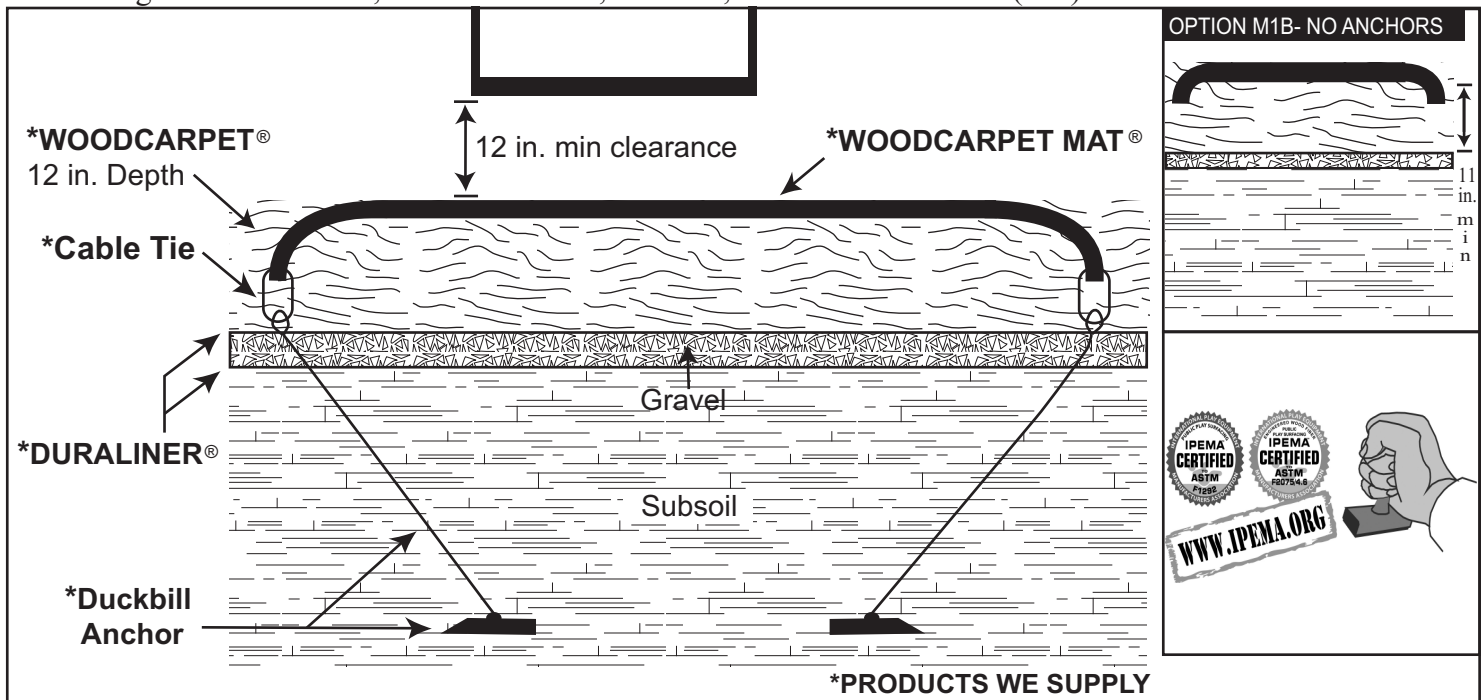

**E. Application:** Kick-out areas on playground surfaces (ie. swings, slide exits, tire swings).

**F. Installation Procedure:**

1. In the kick-out area ensure that there is a minimum of 11 in. (275mm) of WOODCARPET® that is level and compacted. (Woodcarpet PVC Mats are certified for impact attenuation at 12ft with 11 in of Woodcarpet below them.) Installing on top of the surface will provide maximum accessibility.
2. Lay out the mat (smooth side up) to cover the equipment's kick out area.
3. Under the edge of the mat, dig out a channel in the WOODCARPET® to allow approximately 6 in. (160mm) of the mat edges to drop down into the channel. It may be necessary to round the edge of the WOODCARPET® under the mat to allow the edges to hang down into the channel.
4. (If you are not using anchor kits proceed to step 7.) At the anchor points remove Woodcarpet® down to the drainage layer. Using the steel drive rod, drive the duckbill anchor into the subsoil until the loop on the end of the cable is the only thing showing above the surface. Twist and pull the drive rod back out.
5. Insert the steel drive rod through the cable loop and pull upward about 3 in.(75mm). The upward pull on the cable rotates the anchor into a horizontal locking position.
6. Loop the tie wrap (included with the anchor kit) through a hole on the mat edge and through the loop on the end of the anchor cable. Tighten the tie wraps to provide tension, causing the edges of the mat to drop into the channel.
7. Refill and compact the channel around the edge of the mat with WOODCARPET®.
8. Ensure that the vertical distance between the underside of swing seats, when occupied, and the WOODCARPET MAT® is a minimum of 12 in. (300mm), as per ASTM F1487 section 8 and as per CAN/CSA-Z614 section 15.
9. Ensure that the height of slide exit regions above the WOODCARPET MAT® are no greater than 11 in. (275mm) for slides with an elevation no greater than 48 in. (1220mm) and between 7 in. and 15 in. (180mm and 380mm) for slides with an elevation greater than 48 in. (1200mm) as per ASTM F 1487 section 8 and as per CAN/CSA-Z614 section 15.

